


## **OSLO COLLECTION**

## **DOUBLE ROBE HOOK** 144132

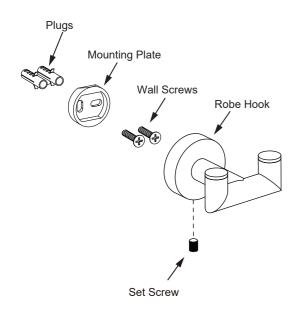

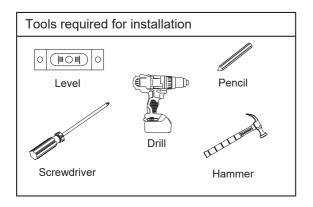

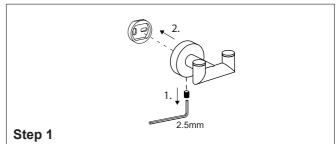

Loosen the set screw on the accessory and remove the backing plate. Position the accessory against the wall and mark outline with pencil.

